

# PRECISIONEERED RELOADING EQUIPMENT

We think that we make the very best reloading equipment in the world.
If you agree, please tell your friends.
If you disagree, tell us - we want to do something about it!

### **Customer Service**

1-800-533-5000 (US or Canada) or 530-533-5191


Hours: Monday - Thursday, 6:30am - 3:00pm Pacific Time (hours may vary)

e-mail: rcbs.tech@atk.com or visit our website at www.rcbs.com

RCBS, 605 Oro Dam Blvd., Oroville, CA 95965

CCI- SPEER - RCBS OUTERS - RAMLINE - ORBEX - FEDERAL

# VIBRATORY CASE CLEANER

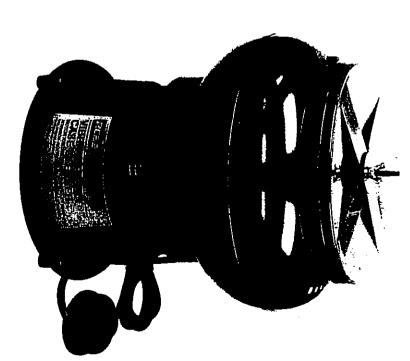

PRODUCT INSTRUCTIONS

## IMPORTANT SAFETY INSTRUCTIONS Read all instructions

Reloading is an enjoyable and rewarding experience. This case cleaner will add to the quality of your reloaded ammunition. It has been designed from the beginning with the user's safety in mind.

extremely remote. observing these rules, the chance of a hazardous occurrence becomes As with any mechanical device, safety rules must be followed. By

#### GENERAL

- Use the equipment as the manufacturer recommends
- the operation of the tool. Don't take short cuts. Study the instructions carefully and become thoroughly familiar with
- Observe "good housekeeping" in the reloading area.
- Keep tools and components neat, clean and orderly.
- Wear adequate eye protection

#### WARNINGS

- this product. Read this instruction manual thoroughly before attempting to operate
- by the manufacturer for cartridge case cleaning. Do not use any chemicals other than those specifically recommended
- Do not attempt to salvage badly corroded cases which might be structurally weakened.
- Do not attempt to clean loaded ammunition under any conditions

### ELECTRICAL

- only into a proper outlet. 220VAC unit is equipped with a European two prong round cord. Plug The 110VAC unit is equipped with a three prong grounded cord. The
- Do not work on wet floors.
- Do not plug into electrical outlet until the proper voltage is supplied.
- Locate all electric cords away from moisture, rain and moving parts.
- to code if needed. Periodically check all cords for worn/frayed spots and replace or repair

#### **OPERATOR**

- machinery. Wear clothing that is not loose. Loose clothing can be drawn into
- Keep your hands and fingers away from "danger" spots where they might be injured.
- Keep children and visitors away from machinery.

  Take off loose jewelry before using machines. Be sure that all moving

parts are shielded and all guards are in place before operating any equipment.

## RECORD KEEPING

showing the date produced, and the primer, powder and bullet used. Labels for this purpose are packed with SPEER bullets. Keep complete records of reloads. Apply a descriptive label to each box

Since RCBS has no control over the choice of components, the manner in which they are assembled, the use of the product or the firearms in expressed or implied is assumed for the use of ammunition reloaded with which the resulting ammunition may be used, no responsibility, either this product.

# SAVE THESE INSTRUCTIONS

sealed ball-bearing motor. This case cleaner is shipped completely capacity, 3/16" bowl thickness, wide, stable base and a quiet fan-cooled, efficiently. Features of the case cleaner include a full 3-1/2 quart working cleaning and polishing a large quantity of cartridge cases quickly and maintenance-free operation. assembled and by following these instructions should provide safe INTRODUCTION
The RCBS Vibratory Case Cleaner has been designed specifically for

### UNPACKING

instructions and familiarize yourself with the various parts of the cleaner. Unpack the case cleaner and take a few minutes to review these

# **OPERATING INSTRUCTIONS**


approximately 400 .38 Special cases, 180 .30-06 cases or the equivalent half-full with dry media. Then, load with cases. The unit will hold the center of the lid. The cleaning bowl is engineered to create a fast internal cyclonic action. For best results, the bowl should be at least After unpacking the case cleaner, set the unit on a solid, level surface to operate. To remove the case cleaner lid, unscrew the nut located in

amount of other sized cases. The best ratio of cases and media will be determined by you as you use the unit. Replace the lid and tighten the nut in the center of the lid. Plug the power cord into the electrical outlet, turn the on/off switch to the "on" position and the unit will start the vibrating action. Running time will be determined by the condition of the cases and the degree of cleanliness desired.

To empty the bowl, first turn the unit off and unplug the power cord. Then remove the lid by unscrewing the nut in the center of the lid. Next, simply turn the entire unit upside down to pour the contents into a container. Again, be sure to unplug the unit from the electrical outlet. Separating the media from the cases can be made easier with the use of the 87076 Rotary Case Media Separator or the 87075 Case Media Sifter available from your local sporting goods retailer.

Do not attempt to make any adjustments or repairs to the electrical system of the Vibratory Case Cleaner. Contact the Customer Service Department at RCBS for this service.

This photo shows a properly loaded case cleaner. The amount of dry media will be determined by the type and quantity of cases.

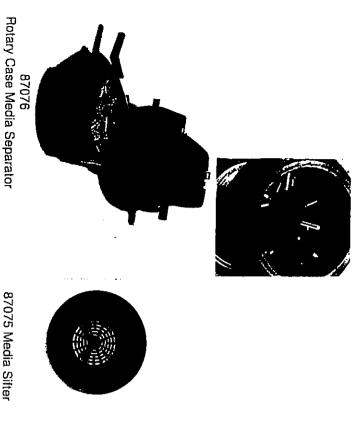

## LIMITED WARRANTY

Congratulations on the purchase of your new RCBS Vibratory Case Cleaner. Your new unit is warranted to be free from defects in material or workmanship for a period of two (2) years from the date of purchase. This warranty is extended only to the original consumer purchaser. Should you believe that your Vibratory Case Cleaner is defective in material or workmanship, you must return it to Ammunition Accessories Inc. through its RCBS Operation, postage paid, for evaluation. If defective, the product will be repaired or replaced at RCBS's option, at no charge. Please send a check in the amount of ten dollars (\$10) U.S. payable to RCBS Operations for return shipping and handling, along with the unit to:

RCBS Operations, 605 Oro Dam Blvd., Oroville, CA 95965

Please complete the attached warranty registration card and mail this card to us at the above address within 30 days of purchase. Failure to send this card will not adversely affect your warranty rights if you can otherwise show in a reasonable way the date the product was purchased (e.g. your dated purchase receipt). But sending this card is one convenient way to establish in our files the date of purchase and will provide us with marketing information which should allow us to better meet your needs in the future.

THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGE RESULTING FROM: CARELESSNESS, MISUSE, IMPROPER INSTALLATION, MODIFICATION, OR IF YOUR VIBRATORY HAS BEEN ALTERED OR REPAIRED BY ANYONE OTHER THAN FACTORY PERSONNEL, COMMERCIAL USE OR ACTS OF NATURE (i.e. fire or flood).

WARRANTY SERVICES CANNOT BE PROVIDED WITHOUT MEETING THE ABOVE REQUIREMENTS. Please retain this warranty certificate for future reference.

THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. RCBS OPERATIONS IS NOT LIABLE FOR DAMAGES IN EXCESS OFTHE PURCHASE PRICE OFTHE PRODUCT AND UNDER NO CIRCUMSTANCES SHALL RCBS OPERATIONS BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES. HOWEVER, SOME STATES DO NOT ALLOW LIMITATIONS ON INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

The above warranty provides the sole and exclusive warranty available to the customer in the event of a defect in material or workmanship in the Vibratory Case Cleaner. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

| RCBS Operation 605 Oro Dam Blvd. Oroville, CA 95965  1. Where Purchased: 2. Name:Mr/Ms. 3. Street Address: 4. City, State, ZIP: 5. Product Purchased: 6. Date Purchased: Please enclose a copy of the original Register Receipt  DETACH AND PLACE IN ENVELOPE | Complete all sections |  |
|---|-----------------------|--|